

# REPLACEMENT SHEET

4/5

FIG.4

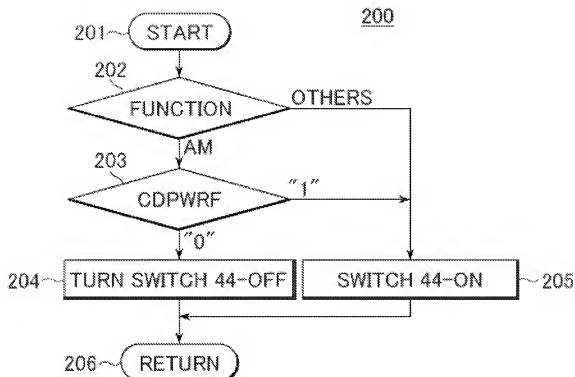



FIG.5

FUNCTION FLAG CDPWRF	BROADCAST RECEIVING	CD/CASSETTE/ LINE INPUTS (MD)
"1"	ON	ON
"0"	ON	OFF

POWER CONTROL OF CD PLAYER

## REPLACEMENT SHEET

FIG.1

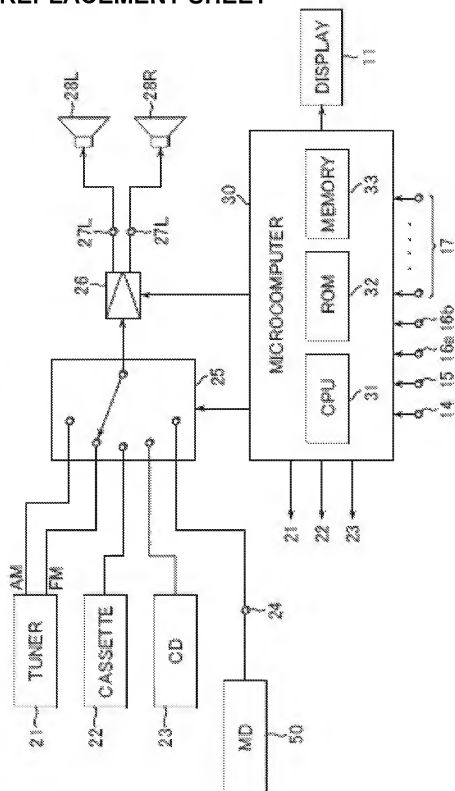

# REPLACEMENT SHEET

2/5

FIG.2

